



LITTLE DOG

Remote Trainer



Operating and Training Guide

Please read this entire guide before beginning

Thank you for choosing PetSafe®, the best selling brand of electronic training solutions in the world. Our mission is to be the most trusted brand in the pet ownership experience. We want to ensure your pet's safety by providing you with the tools and techniques to successfully train your pet. If you have any questions, please contact the Customer Care Center at 1-800-732-2677 or visit our website at www.petsafe.net.

Table of Contents

Components	4
Other Items You May Need.....	5
How the System Works	5
Key Definitions	6
Operating Guide	
Prepare the Remote Transmitter	9
Prepare the Receiver Collar.....	13
Fit the Receiver Collar	17
Find the Best Intensity Level for Your Pet	21

Training Guide

General Tips.....	23
Teaching Basic Obedience.....	27
Eliminating Unwanted Behavior.....	32
Frequently Asked Questions	41
Troubleshooting.....	45
To Pair the Remote Transmitter and Receiver Collar.....	47
Test Light Instructions	48
Terms of Use and Limitation of Liability.....	49
FCC.....	51

 
Components



**Remote
Transmitter**



Lanyard



Charging Adapter



**Test Light
Tool**



**PetSafe
Little Dog
Receiver Collar**



**Warranty
Card**



**Operating and
Training Guide**



**Battery
(PetSafe® RFA-188)**

Other Items You May Need

- Scissors
- Non-metallic collar and 10-foot leash for training

How the System Works

The PetSafe Remote Trainer has been proven safe, comfortable, and effective for all pets up to 55 pounds. This system assists you in controlling your pet without a leash in a range up to 100 yards. At the push of a button, the Remote Transmitter sends a signal, activating the Receiver Collar. Using the Remote Trainer consistently and correctly, many misbehaviors that your pet exhibits can be corrected or any basic obedience commands can be taught.

Key Definitions

Remote Transmitter: Transmits the radio signal to the Receiver Collar. It is waterproof.

Transmitter Indicator Light: Indicates that a button is pressed and also serves as a low-battery indicator.

Intensity Dial: Provides multiple levels of Stimulation so you can match the correction to your pet's temperament.


Upper Button: This button is factory-set to deliver a Negative Tone only.

Lower Button: This button is factory-set to deliver Continuous Stimulation set by the Intensity Dial.

Side Button: This button is factory-set to deliver a Positive Tone only.

Charging Jack: For connecting the charger. Although the Remote Transmitter is waterproof without the charger cover, keep the cover in place when not charging to keep debris out of the opening.

Remote Transmitter

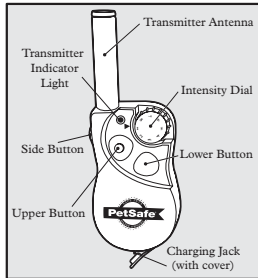

Continuous Stimulation: You control when and how long Stimulation is delivered to your dog through the Receiver Collar's Contact Points. When the Continuous Stimulation (Lower Button) is pressed for 8 seconds or more, the Remote Transmitter will "time-out." The button will need to be released and pressed again before additional Stimulation can be delivered.

Negative Tone: Use a Negative Tone (Upper Button) with a Stimulation to stop unwanted behaviors. Timing is critical. The Negative Tone followed by the Stimulation should occur during or immediately after the unwanted behavior. Once your dog associates the Negative Tone with the Stimulation, you will only need to use the Negative Tone.


Positive Tone: Use the Positive Tone (Side Button) as a marker to reinforce positive behavior. Again, timing is critical. Praise or treat the dog immediately following the Positive Tone.

Receiver Collar: Receives the radio signal from the Remote Transmitter. It is waterproof.

Contact Points: The contacts through which the Receiver Collar delivers Stimulation.

Two Color LED: Indicates when the Receiver Collar has been turned on or off. This light also serves as a low battery indicator. Please see page 16 for additional LED functions.

Receiver Collar

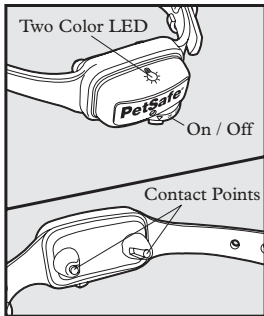


Operating Guide

Prepare the Remote Transmitter

Charge the Remote Transmitter

1. Lift the rubber cover protecting the Remote Transmitter Charging Jack.
2. Connect the charger connector to the Remote Transmitter Charging Jack.
3. Plug the charger into a standard wall outlet.
4. Charge the Remote Transmitter for 24 hours for the first charge. Recharges take only 12 hours.

Note: The Transmitter Indicator Light will flash after 12 hours of charging. For the first charge, continue to charge the Remote Transmitter for an additional 12 hours.

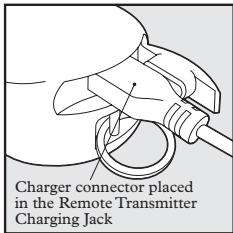

Charger connector placed in the Remote Transmitter Charging Jack

5. When charging is completed, replace the rubber cover.

Note: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.

Transmitter Indicator Light - Function and Response

Remote Transmitter Function	Indicator Light Response
Transmitter being charged for up to 12 hours	Solid in color
Transmitter being charged for more than 12 hours	Flashes once per second
Any button being pressed - good battery	Solid in color
Any button being pressed - low battery	Flashes once per 1/2 second
Any button pressed for tone or continuous stimulation	Solid in color

Rechargeable Battery

- The rechargeable Nickel Metal Hydride (NiMH) battery is not memory sensitive and does not require depletion before charging.
- The battery comes partially charged from the factory, but will require a full charge (24 hours) before the first use.
- Remember - Always keep the battery away from flame.
- When storing the unit for long periods, remember to regularly give the battery a full charge (12 hours). This should be done once every 4 to 6 weeks.
- Excessive overcharging can shorten battery life. After initial charge, never leave the battery plugged in for more than 12 hours.
- If your equipment has not been charged for an extended period, you may experience a decrease in battery life the first few uses. Afterwards, the battery life will return to previous capacity levels.

- You should expect hundreds of recharge cycles from your battery. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Customer Care Center to purchase a new battery.
- The battery should last for a period of 3-5 years. When a battery needs replacement, you can order a new pack by contacting our Customer Care Center or visit our website at www.petsafe.net. Please do not open the Remote Transmitter until you have received the replacement.

Prepare the Receiver Collar

Turning the Receiver Collar On and Off

The Receiver Collar is packaged with the battery module installed in the “OFF” position. To activate the collar, use the test light tool to turn the Battery Module counter-clockwise until the arrow lines up with the “ON” position. If the Receiver Collar is not going to be used on the dog immediately leave it in the “OFF” position. The LED Light will flash once every 5 seconds until the Receiver Collar is turned off. The flashing light indicates the Receiver Collar is ready to receive a radio signal from the Remote Transmitter.

Once the Receiver Collar has been turned on, press the Upper or Side Button of the Remote Transmitter. Upon pressing, the Receiver Collar should beep for as long as the Upper or Side Button is pressed. If it does not, see “To Pair the Remote Transmitter and the Receiver Collar” in the Troubleshooting section.

Note: To extend the life of the batteries, turn the Receiver Collar off when it is not in use.

Important: If the Receiver Collar is left on continuously, the maximum battery life (before replacing batteries) will be two weeks.


To Insert and Remove the Battery

Note: Do not install the battery while the Receiver Collar is on your pet.

This Receiver Collar utilizes a replaceable PetSafe® battery (RFA-188). This unique battery is designed to make battery replacement easier and increase water protection.

To insert the battery, align the symbols on the battery (indicator line) and Receiver Collar (triangle). Using the edge of the Test Light Tool as shown, turn the battery clockwise until the arrow lines up with the “On” position if you are putting it on the dog or the “Off” position if it is not being put on the dog right away (**A, B**).

To remove the battery, turn the battery counter-clockwise using the edge of the Test Light Tool as shown, (**C, D**).

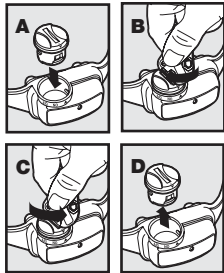

DO NOT attempt to cut into or pry open the battery. Be sure to discard the used battery properly.

A replacement PetSafe® battery (RFA-188) can be found at many retailers. Contact the Customer Care Center at 1-800-732-2677 or visit our web site at www.petsafe.net for a list of common retailers.

Two Color LED – Function and Response

Receiver Function	LED Response	Receiver Beeper Response
When the Battery is installed and turned to the “ON” position	Green Light flashes five times	Beeps five times
Unit is on	Green Light flashes once every five seconds	None
Continuous stimulation delivered to dog	Red light flashes between corrections for as long as the button is held down on the transmitter	None
Low Battery Condition	Red light flashes three times every five seconds	None
Good Tone Signal being received	Green light flashes	Good Tone Beep
Negative Tone Signal being received	Red light flashes	Negative Tone Beep

 

Fit the Receiver Collar

Important: The proper fit and placement of your Receiver Collar is important for effective operation. The Contact Points must have direct contact with your dog's skin on the underside of his neck.



To assure a proper fit, please follow these steps:

1. Make sure that the Receiver Collar is turned off.
2. Start with your dog standing comfortably (E).
3. Place the Receiver Collar high on your dog's neck close to the ears.
Center the Contact Points underneath your dog's neck, touching the skin (F).

Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent.

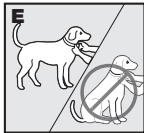


4. The PetSafe QuickFit™ Collar is designed so you can quickly attach and remove the Receiver Collar from your dog while maintaining the desired fit.
- With the Snap Buckle fastened (**G**), thread the collar through the Metal Buckle (**H**).
 - Slide the excess collar through the “C” Loop on top of the Snap Buckle. This will hold the collar in place.
 - Once the collar fit is determined, simply use the Snap Buckle to remove and replace the collar.

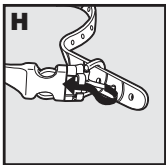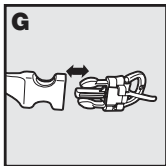

5. The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit under the strap (I). Allow your dog to wear the collar for several minutes, then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver Collar.

6. Trim the collar as follows:

- a. Mark the desired length of the collar with a pen. Allow for growth if your dog is young or grows a thick winter coat.
- b. Remove the Receiver Collar from your dog and cut off excess.

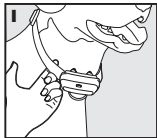

Important: Do not attach a leash to the collar. This can result in pulling the Contact Points too tightly against your pet's neck. Attach a leash to a separate, non-metallic collar or harness, making sure the extra collar does not put pressure on the Contact Points.

Care and Cleaning

For comfort, safety, and effectiveness of this product, please ensure that you check the fit of your pet's collar frequently. This Guide describes proper collar fitting. If any skin irritation is observed, discontinue the use of the collar for a few days. If the condition persists beyond 48 hours, see your veterinarian.

To prevent skin irritation from occurring:

- The Receiver Collar should not be worn for more than 8 hours out of every 24-hour period.
- Your pet's neck and the Contact Points must be washed weekly with a washcloth and mild hand soap, then rinsed thoroughly.
- Be sure that your pet's neck is thoroughly dry before placing the Receiver Collar back on his neck.

Find the Best Intensity Level for Your Pet

The Remote Trainer has eight (8) different Intensity Levels. This allows you to choose the stimulation that is best for your pet.

Note: Always start at the lowest level and work your way up.

Once you have placed the Receiver Collar on your pet, it is time to find the Intensity Level that is best for your pet. This is called the Recognition Level.

A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

Follow the steps below to find your pet's Recognition Level:

1. Press the Side Button (Positive Tone) for 2 to 3 seconds. If your pet reacts to this, you may use this button for training, simply substitute the Side Button (Positive Tone) whenever Lower Button (Stimulation) is used in the Training Guide section. If your pet shows no reaction, go to the next step.

2. Starting at Level 1, press the Lower Button (Stimulation) continuously for 2 to 3 seconds.
 3. If your pet shows no reaction, go to the next Intensity Level and repeat the process.
 4. Repeat each Intensity Level several times before moving to the next level.
 5. **YOUR PET SHOULD NOT VOCALIZE OR PANIC. IF THIS HAPPENS, GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.**
 6. If your pet continues to show no response at Level 8, check the fit of the Receiver Collar.
- If all of these steps have been done and your pet continues to show no reaction to the stimulation, contact the Customer Care Center at 1-800-732-2677.

Training Guide

General Tips

- Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with the training, your pet may become confused.
- Be consistent. Give your pet a tone or stimulation with each misbehavior.
- Do not over-correct your pet. Use as few stimulations as possible to train your pet.
- Unless you can supervise him, it is recommended that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the training by hiding or acting fearful, redirect his attention to a simple and appropriate behavior such as the “Sit” command.
- Never use the Remote Trainer to correct or eliminate any form of aggressive behavior. If you are unsure if your dog is aggressive, please consult your veterinarian or a certified trainer.

Teaching Your Pet the Positive Tone (Using the Side Button)

Before using the Trainer to correct your pet, spend 10 to 15 minutes per day for 2 or 3 days helping him create the association of the positive tone with reward and praise. To accomplish this:

1. Push the Side Button (Positive Tone) for 2 consecutive seconds.
2. Release the button and immediately reward your pet with verbal praise, petting, or a small food reward. Spend 3 to 5 seconds on your rewarding.
3. Wait a few minutes and repeat holding the Side Button (Positive Tone) for 2 seconds following with praise.

Vary the reward to prevent your pet from anticipating a specific type. This stage of training is complete when your pet obviously anticipates a reward when he hears the positive tone.

Using the Negative Tone (Upper Button)

As soon as your pet begins the earliest sign of misbehavior, press the Upper Button (Negative Tone). For example, if you want to teach your dog to stay off the couch, press the Upper Button (Negative Tone) as soon as he puts one paw on it. Do not wait until he is completely on the couch.

1. Hold the Upper Button (Negative Tone) for up to 2 seconds at a time, releasing the button as soon as your pet stops the misbehavior.
2. If your pet has not stopped the misbehavior after two seconds of correction, release the Upper Button (Negative Tone), then press it again for up to two consecutive seconds.
3. Continue this sequence until the misbehavior has stopped.
4. Once the misbehavior has stopped, count out two seconds and then push the Side Button (Positive Tone) for two consecutive seconds.
5. Reward your pet after pushing the Side Button (Positive Tone) approximately once every 3 to 5 times, to help your pet maintain the association of the positive tone with reward.

To train using Stimulation (Lower Button):


You control the timing of the Lower Button (Stimulation) being applied to your pet. The stimulation stays on as long as the Lower Button (Stimulation) is pressed. If this button is pressed longer than 8 seconds, the Remote Transmitter will “time-out,” the Transmitter Indicator Light will turn off, and stimulation will no longer be delivered to your pet. This is a safety feature in the Remote Transmitter. If the Remote Transmitter times out, release the Lower Button (Stimulation) and press it again to deliver stimulation.

Note: For any of these training methods to be effective, they must be used consistently along with the command you are trying to teach your pet.

Teaching Basic Obedience

The “Sit” Command

1. Put a separate, non-metallic collar on your pet's neck ABOVE the Receiver Collar, and attach a 10-foot leash.
Note: Be sure the extra collar does not put pressure on the Contact Points.
2. Hold the leash and the Remote Transmitter in one hand. Keep your other hand free to guide your pet into a “Sit” position.
3. Press and hold the Lower Button (Stimulation).
4. Immediately give the “Sit” command while continuing to hold the Lower Button (Stimulation).

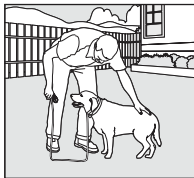



5. Release the Lower Button (Stimulation) as soon as your pet is in position, and praise him.
6. Release your pet from the “Sit” command and play.
7. Repeat Steps 2 through 6.

Note: If your pet breaks the “Sit” command, repeat steps 3 through 6. Keep your pet close to you while teaching the “Sit” command.




The “Come” Command

1. Put a separate, non-metallic collar on your pet’s neck **ABOVE** the Receiver Collar, and attach a 10-foot leash. *Note: Be sure the extra collar does not put pressure on the Contact Points.*
2. Hold your leash in one hand and the Remote Transmitter in the other.
3. Wait for your pet to walk away from you. Using the Recognition Level for your pet, press and hold the Lower Button (Stimulation) on your Remote Transmitter.
4. Immediately give the command “Come” while continuing to hold the Lower Button (Stimulation).
5. Using the leash, gently guide your pet toward you until he begins to come in your direction.
6. Immediately release the Lower Button (Stimulation) as soon as your pet steps towards you, and praise him enthusiastically.

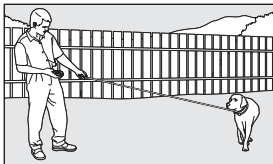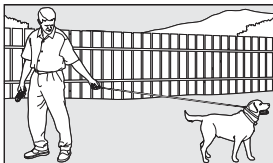


7. Quickly move backwards as your pet begins to come back to you, praising him the entire time.
8. Praise your pet when he returns to you.
9. Repeat Steps 3 through 8.
10. Once your pet responds readily to the “Come” command several times, back away from him without giving a command. When your pet turns toward you, give the command “Come” (WITHOUT STIMULATION) and praise him while you continue to back up. Praise your pet when he returns to you.
11. Use your leash to prevent your pet from running past you. If your pet manages to run past you, repeat Steps 3 through 8.

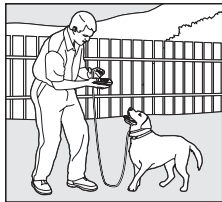

The “Stay” Command

1. Put a separate, non-metallic collar on your pet’s neck ABOVE the Receiver Collar, and attach a 10-foot leash. *Note: Be sure the extra collar does not put pressure on the Contact Points.*
2. Put your pet on his bed. Hold your leash in one hand and the Remote Transmitter in the other.
3. Staying within 3 feet, walk the perimeter of the bed. Do not say anything to your pet.
4. If your pet tries to leave the bed, press and hold the Lower Button (Stimulation) and give the “Stay” command. Continue to hold the button until your pet is back on his bed. If necessary, use the leash to guide your pet onto his place.

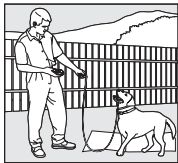

5. Praise your pet when he is back on his bed.
6. Once your pet has settled for a few seconds, release him and play calmly.
7. Repeat steps 1 through 5.



Eliminating Unwanted Behavior

Jumping Up

Pets typically jump up to get attention. If you do not want your pet to jump on you, then friends or members of the family should not encourage this behavior. That means every time your pet jumps on someone, he should be reprimanded or redirected to an alternate and acceptable behavior, for which he can receive praise.

Note: It is best if your pet first understands the “Sit” command.


1. Choose your pet's Recognition Level.
2. As soon as your pet lifts his paws off the ground to jump on you, press the Lower Button (Stimulation) and give the command "Sit."
3. Release the Lower Button (Stimulation) immediately once your pet is sitting, and verbally praise him.
4. If your pet ignores the stimulation, increase the Intensity Level by 1.
5. Practice this exercise in several different areas and use different people for distractions.




Digging

It is important to first understand why your pet is digging. Many dogs, such as terriers, were bred to flush out prey, and digging is very innate to them. Other dogs may be digging to find a cool spot to lie down, or simply out of boredom. Your pet may no longer have the desire to dig if he is provided with the following:

- A cool, shaded area in which to lie down, and plenty of water.
 - An alternate activity, such as a favorite toy.
 - Plenty of play, exercise, and attention.
 - A yard free from rodents or prey that he may be trying to flush out.
1. Choose the Intensity Level 1 higher than your pet's Recognition Level.
 2. Place the Receiver Collar on your pet and wait at least 10 minutes before placing him in the yard. No other people or pets should be in the yard, as you do not want your pet to associate the stimulation with anything other than his digging. Your pet must be securely fenced in or contained during training.

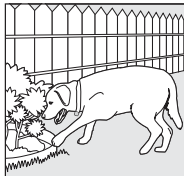


3. From a window or area where your pet cannot see you, wait until your pet begins to dig.
4. While your pet digs, press the Lower Button (Stimulation) and release it when he stops digging. Only press the button while your pet is in the act of digging, and do not say anything to him.
5. If your pet ignores the stimulation, increase the Intensity Level by 1.
6. Continue to watch your pet, as he may choose another area to dig.
7. Do not allow your pet in the yard unsupervised until he has completely stopped digging.

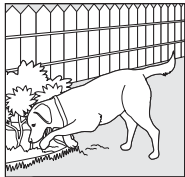



Chasing

Chasing is an instinctive behavior stimulated by moving objects. Some dogs have a particularly strong desire to chase that can put them in harm's way and leave you helpless. Never allow your dog off the leash or out of a contained area until he has learned the "Come" command, regardless of the distraction. Be consistent and correct your dog every time he chases something.

1. If your dog has not learned the "Come" command, keep a leash on him so you can physically stop him before he reaches the object he is chasing.
2. Choose the Intensity Level 1 higher than your dog's Recognition Level.
3. Set up a scenario where your dog is enticed to chase an object. Common items could be cars, motorcycles, bicycles, etc. (do not use toys).

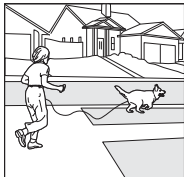



4. When the object passes in front of your dog, make sure to hold the leash with a firm grip. As soon as your dog begins to chase the object, press and hold the Lower Button (Stimulation) until he stops.
5. When your dog stops chasing the object, immediately release the button, walk backwards and give the command “Come.” Praise your dog as he comes to you.
6. Repeat the process until your dog stops chasing the object.

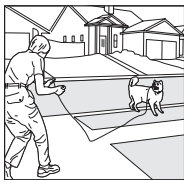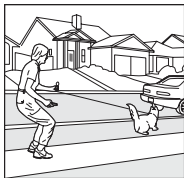

Trash Raiding

The easiest way to prevent trash raiding is to remove garbage and tempting food from your pet's environment. You can use the Remote Trainer to teach your pet to stay away from these items; however, you must be prepared to correct your pet every time he approaches them.

1. Choose the Intensity Level 1 higher than your pet's Recognition Level.
2. Pick a temptation for your pet and position yourself where he cannot see you.
3. While your pet's mouth is touching the temptation, press and hold the Lower Button (Stimulation). Immediately release the button when your pet leaves the temptation.

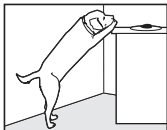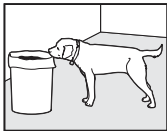

4. Do not say anything, as you want your pet to associate the stimulation with his behavior, not you.
5. If your pet does not respond to the stimulation, increase the Intensity Level by 1 and repeat the process.
6. Repeat this process in several different locations with different temptations.

Excessive Barking

Barking is an instinctive behavior for dogs. It is impossible to keep your dog from barking entirely, but you can teach him to be quiet when you give him a command.

Note: This will only be effective when you are at home with your dog.

1. Choose your pet's Recognition Level.
2. Put your dog in a situation that will tempt him to bark.
3. When your dog begins to bark, press the Lower Button (Stimulation) and give him the command "Quiet."
4. Immediately release the button once your dog stops barking and praise him.
5. If your dog ignores the stimulation and continues to bark, increase the Intensity Level by 1 and repeat the process.
6. Practice this exercise in different areas using different situations that would cause your dog to bark.

Frequently Asked Questions

Is the stimulation safe and humane?	While the stimulation is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.
How old does my pet have to be before using the PetSafe Remote Trainer?	Your pet should be able to recognize basic obedience commands such as “Sit” or “Stay”.
Once my pet is trained and has been obeying my commands, will he have to continue to wear the Receiver Collar?	Probably not. You may need to reinforce training with the Receiver Collar from time to time.

Is the Receiver Collar waterproof?	Yes. When changing the battery, be sure to keep the area free of dirt and debris.
Can I use the Remote Trainer on aggressive dogs or stop my dog from being aggressive?	We do not recommend any of our products to be used on aggressive dogs. If you are unsure if your dog is aggressive, please consult your veterinarian or a certified trainer.
Will I get exactly 100 yards of range with the Remote Trainer?	The range of the Remote Trainer will vary according to terrain, weather, vegetation, as well as transmission from other radio devices.
How long can I continuously deliver stimulation to my pet?	The maximum amount of time you can press the Lower Button (Stimulation) and deliver stimulation to your pet continuously is 8 seconds. After this, the Remote Transmitter will time-out, and the Lower Button (Stimulation) must be released and pressed again.

<p>What do I do if my pet's neck becomes red and irritated?</p>	<p>Discontinue use of the Receiver Collar for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, monitor your pet's skin condition closely.</p>
<p>Can I attach a leash to the Receiver Collar?</p>	<p>No. This can result in pulling the Contact Points too tightly against your pet's neck. Use a separate non-metallic collar placed above the Receiver Collar to attach a leash.</p>
<p>How often do I need to replace the battery?</p>	<p>If the Receiver Collar is left on continuously, the battery will last about 2 weeks. We recommend you turn the Receiver Collar off when it is not in use. The battery in the Remote Transmitter will last for a period of 3-5 years.</p>

How long can I leave the Receiver Collar on my pet?

The Receiver Collar is not designed to be worn constantly. We recommend the Receiver Collar not be worn for more than 8 hours out of every 24-hour period.

Troubleshooting

My pet does not respond when I press the Upper, Lower, or Side Button.

- Make sure the Receiver Collar has been turned on.
- If your range has reduced from the first time you used the Remote Trainer, the battery(s) may be low in either the Remote Transmitter or Receiver Collar. This is indicated by the Indicator Light or the LED flashing.
- The range of the Remote Trainer will vary according to terrain, weather, vegetation, as well as transmission from other radio devices.
- Test the Receiver Collar. See “Test Light Instructions.”
- Make sure the Contact Points are placed snugly against your pet’s skin.
- Trim your pet’s fur where the Contact Points touch his neck.
- Increase the Intensity Level by 1. See “Find the Best Intensity Level for Your Pet.”

The Receiver Collar will not turn on.	<ul style="list-style-type: none">• Check that the battery has been installed properly. See “To Insert and Remove the Battery.”
The Receiver Collar is not responding to the Remote Transmitter.	<ul style="list-style-type: none">• Verify the Receiver Collar is on.• See “To Pair the Remote Transmitter and the Receiver Collar.”

To Pair the Remote Transmitter and Receiver Collar


If your Receiver Collar does not beep when the Upper or Side Button of the Remote Transmitter is pressed, or if you feel the Receiver Collar is not responding to the Remote Transmitter:

1. With the Receiver Collar off your pet, turn the Receiver Collar on.
2. Turn the Intensity Level Dial on the Remote Transmitter to “1”.
3. Separate the Remote Transmitter and the Receiver Collar by 2 feet.
4. Press both the upper and lower buttons on the Remote Transmitter at the same time and hold for ten seconds.
5. The Receiver Collar should emit two beeps.
6. If the Receiver Collar does not beep twice, please contact the Customer Care Center at 1-800-732-2677.



Test Light Instructions

1. Hold the Test Light Contacts to the Contact Points.
2. Press the Lower Button (Stimulation) on the Remote Transmitter.
3. The Test Light will flash. *Note: At higher Intensity Levels, the Test Light will flash brighter.*

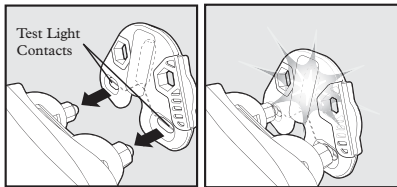

Save the test light for future testing.

Note: If the Test Light does not flash, install a new battery and re-test. If Test Light still does not flash, contact the Customer Care Center at 1-800-732-2677.

Terms of Use and Limitation of Liability

1. Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this product implies acceptance of all such terms, conditions, and notices.

2. Proper Use

This Product is designed for use with pets where training is desired. The specific temperament of your pet may not work with this product. We recommend that you not use this product if your pet is aggressive. If you are unsure whether this is appropriate for your pet, please consult your veterinarian, certified trainer or contact our Customer Care Center at 1-800-732-2677.

Proper use includes reviewing the entire Operating and Training Guide provided with your product and any specific Caution statements.

3. No Unlawful or Prohibited Use

This Product is designed for use with pets only. This pet training device is not intended to harm, injure, or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a practical installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the interfered receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different to that to which the receiver is connected.
- Contact the Customer Care Center at 1-800-732-2677.

Unauthorized changes or modifications to the equipment, not approved by Radio Systems Corporation, could result in not meeting compliance with FCC regulations and could void the user's authority to operate the equipment.

Product Warranty

Please register your product online at www.petsafe.net. All parts are covered under warranty for the life of this product. Labor is covered for the first year of ownership. Thereafter, there is a minimum service charge for the repair or replacement of the product. Misuse, loss, damage by pet or improper use or handling is not covered. PetSafe will not pay for loss of time, inconvenience, loss of use of your product or any incidental or consequential damage. Warranty void if product resold.

Please contact the Customer Care Center at 800-732-2677 if you need service or for help in troubleshooting and, if needed, to arrange a repair for your product. (A service charge may apply.) Also, please visit our website www.petsafe.net for Frequently Asked Questions and Troubleshooting Tips.

Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN 37932
1-800-732-2677
www.petsafe.net
400-829

©Copyright 2006, Radio Systems Corporation