

Einstein BarkLess

BL-100

Visit Gun Dog Supply.com
 Order a BarkLess BL-100 Rechargeable No Bark Collar
 See Other E-Collar Technologies Products

WELCOME

Thank you for purchasing the Einstein BL-100 BarkLess E-Collar. E-Collar Technologies products are designed and produced in compliance with stringent quality methods and standards. They are subject to rigorous environmental tests including high and low temperatures, humidity, shock, dust, vibration and drop tests. We assemble all of our products in the USA and are confident that you will be highly satisfied with E-Collar Technologies equipment.

Thank you again for choosing E-Collar Technologies and good luck with your training and have a great day.

CHARACTERISTICS

- Incorporates Time Delay Between Stimulation Routines.
- ON/OFF Function and 5 level Stimulation Modes.
- LED light to Indicate Battery Levels.
- Employs Li-Po Battery for Quick Charging.
- Adaptable to Various Size Dogs.
- Vibration Sensor Technology is Activated by Dog's Barking Only.
- Fully Waterproof and Shock Resistant.
- Employs Antibacterial Plastic and Medical Grade Contact Points to Protect the Dog's Skin from Irritation.

COMPONENTS

- BL-100 Collar Unit with Collar Strap • Lithium Polymer Charge Adaptor



- Owner's Manual




- Stainless Steel Contact Points




TABLE OF CONTENTS

• Getting Started03
• Charging the Collar Unit03
• Power On/Off04
• Mode Select Dial04
• Test Mode05
• Testing the BL-100 at Test Mode05
• Changing the Mode06
• How to Select the Correct Mode07
• Indicator Light08
• Correctly Fitting the Collar08
• Contact Points09
• Warranty and Repair10

GETTING STARTED

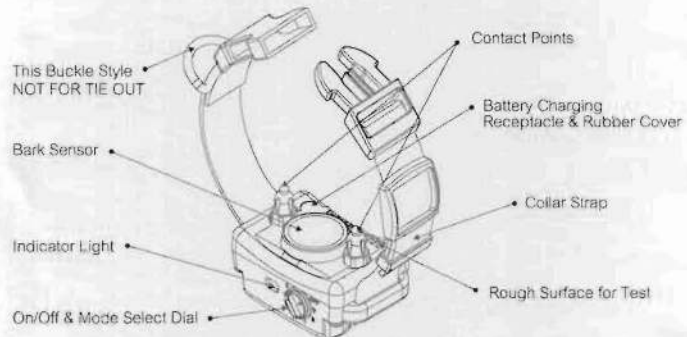


CHARGING THE COLLAR UNIT

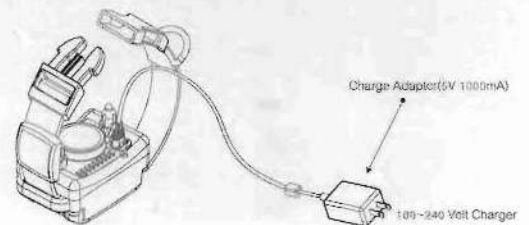

1. Open the rubber cover on the collar unit and connect the charge adaptor.
2. Plug in the charge adaptor to a standard household outlet.

POWER ON/OFF

To turn on the BL-100, rotate the dial to any position other than OFF. To turn off the BL-100, rotate the dial to the OFF position as shown in the figure.

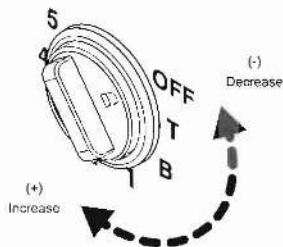

MODE SELECT DIAL

Mode	Description
OFF	Power Off
T	Test Mode
B	Buzzer/Tone Only Mode
1	Level 1 Stimulation
2	Level 2 Stimulation
3	Level 3 Stimulation
4	Level 4 Stimulation
5	Auto Mode

The mode select dial on BL-100 is used to turn power on/off and select the mode or stimulation level.


Turning clockwise increases the stimulation level from 1 to 4, mode 5 is the auto-mode feature which sets the stimulation level automatically.

04

TEST MODE

1. Rotate the mode select dial to "T". The LED will be ON for 1 second and will flicker thereafter. After a while, the BL-100 will enter a sleep mode and the LED is turned off.
2. If the sensor detects any signal, tone and level 1 stimulation will be triggered with red LED.
3. LED will flicker again after stimulation is emitted. The color of the LED indicates the remaining battery level.
4. In Test Mode, the output will be triggered when the sensor detects the signal.

TESTING THE BL-100 AT TEST MODE

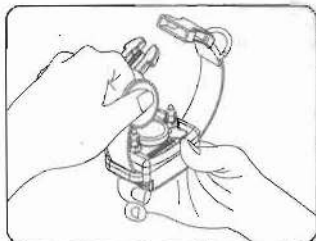

Test the BL-100 by scratching the rough surface below Bark Sensor with coin as shown in the figure. If LED is ON and you hear the tone sound, it means BL-100 is working properly.

05

CHANGING THE MODE

Tone Only Mode

1. Rotate the mode select dial to "B".
2. When your dog barks, the BL-100 will emit only a tone.

Level 1 Mode

1. Rotate the mode select dial to "1".
2. When your dog barks, the BL-100 will emit an education tone and a level 1 corrective stimulus.

Level 2 Mode

1. Rotate the mode select dial to "2".
2. When your dog barks, the BL-100 will emit an education tone and a level 2 corrective stimulus.

Level 3 Mode

1. Rotate the mode select dial to "3".
2. When your dog barks, the BL-100 will emit an education tone and a level 3 corrective stimulus.

Level 4 Mode

1. Rotate the mode select dial to "4".
2. When your dog barks, the BL-100 will emit an education tone and a level 4 corrective stimulus.

Auto Mode

1. Rotate the mode select dial to "5".
2. Auto Mode is great for owners who want to have the stimulation level adjusted automatically. Not all dogs respond to the auto mode, please make sure your dog responds appropriately before leaving him alone.
3. When your dog barks, BL-100 will emit an education tone and a level 1 corrective stimulus.

06


4. If the dog barks again within 10 minutes in this state, the education tone and level 1 stimulus will be emitted again.
5. If the dog barks again within 10 minutes, BL-100 will change the stimulation level and emit an education tone followed by a level 2 stimulus.
6. Each level of stimulation will be repeatedly emitted two times per level and this process is repeated until stimulation level reaches to level 5.
7. If the dog doesn't bark during any ten minute increment, the stimulation level goes back to level 1 and the process is repeated.

HOW TO SELECT THE CORRECT MODE

The lower the stimulation, the better. Always start with level 1 and increase the level should your dog not respond appropriately. Your dog should not vocalize when administered the corrective stimulus. He may twist his head as if a bee was buzzing him. Increase one level at time to prevent over stimulation. The auto mode is an option should you desire a quicker approach.

07

INDICATOR LIGHT

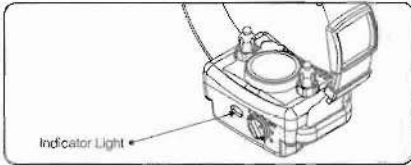

When turned on, Indicator light will be on for 1 second and flicker thereafter. If there is no bark sound for a while, the BL-100 will go to


sleep mode and LED is off also.

Before the BL-100 goes to sleep mode, LED will flicker based on the battery charge level. Battery charge level is signified by the light going from "green" (ready for use) to "amber" (need to charge soon) and then to "red" (charge immediately).

CORRECTLY FITTING THE COLLAR

The collar should be adjusted to allow the "contact points" to have direct contact with the skin. You should be able to fit a couple of fingers between the collar strap and your dog. Too tight poses the risk of skin irritation and discomfort. Too loose and the contact points will not be able to administer the stimulation reliably.

The optimal position for the collar receiver is on either side of the dog's windpipe.

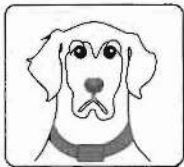

08

CONTACT POINTS

To protect dog's skin, contact points is made by medical stainless steel. The length of contact points is designed to directly contact to dog's skin.

IMPORTANT : When BL-100 is powered ON, please don't touch the two contact points at the same time. You may get stimulated.

Important Notice :

To prevent the occurrence of skin irritations the BarkLess Collar should never be worn for more than 12 hours per day. Should your dog experience skin irritations from over exposure to the contact points, remove the collar receiver unit immediately and stop using your e-collar until all skin irritations are totally healed. Antibiotic ointment will aid in the healing process.

Some dog breeds have very thick fur that requires special contact points, please contact customer service or www.ecollar.com for more information on our euro probes.

- Einstein BL-100 is designed for dogs only. Do not test the BL-100 on humans or other animals.
- Dog should be healthy during training.
- Dogs below 10 pounds or 6 months should not be tested.

IMPORTANT :

1. When playing with your dog always remove the collar unit.
2. Never leave the collar unit on the dog more than 12 hours per day. Dummy collars can be purchased for 24 hours use.

09

WARRANTY AND REPAIR

To Register for the Limited Lifetime Warranty :

To register your Einstein product, please log onto our website at www.ecollar.com, click on the warranty registration link and fill out the required information. Please register your product within 30 days of your purchase. If you do not have access to a computer, please call our toll free number of 1-855-326-5527 and one of our customer service representatives will register your product for you. In the event the product is not properly registered proof of purchase will be needed to obtain warranty work. Product returns without proper registration and proof of purchase will be subject to a warranty start date estimated by your units serial number. Misuse, improper maintenance, lost units are not covered by this warranty.

Limited Lifetime Warranty :

Your Limited Lifetime Warranty begins the date of the original purchase. During the first year all parts and labor are covered 100% including the rechargeable batteries. After the one year replacement warranty has expired the Limited Lifetime Warranty is activated. The labor and shipping costs to repair the defective unit are not included and are the responsibility of the customer. All material will be provided at no cost to the customer. Labor fees will be calculated based on the extent of the work performed.

We will not be satisfied until you are 100% satisfied with your product from E-Collar Technologies.

10



E-Collar Technologies, Inc.

2120 Forrest Park Drive
Garrett, IN 46738-1887

1-855-326-5527 (Toll Free)
• Ext. 1: Sales • Ext. 2: Customer Service
1-855-226-5527 (Toll Free Fax)
customerservice@ecollar.com

www.ecollar.com

©2011 E-Collar Technologies, Inc.



Thank you for Supporting American Workers